



AVERTISSEMENT

1. Lisez et suivez attentivement les instructions avant d'installer et d'utiliser la planche du sac.
2. Assurez-vous que la planche est bien en place et verrouillée ainsi que le sac correctement attaché aux crochets avant utilisation.
3. Ne placez pas plus de 10 kg d'articles dans le sac une fois installé. Un chargement excessif peut entraîner une situation dangereuse instable et endommager votre poussette.
4. La planche du sac n'est pas destinée à transporter des enfants. Ne laissez pas vos enfants monter sur le plateau. Sinon, vos enfants pourraient tomber et se blesser.
5. Ne laissez pas vos enfants jouer avec le sac.
6. Portez une attention particulière lorsque vous traversez une élévation.
7. Engagez le frein de stationnement avant de charger le sac. Chargez le sac éventuellement sur un terrain plat. Placez les objets lourds au fond du sac. Tout devrait être placé entièrement à l'intérieur du sac, le chargement déséquilibré peut entraîner une condition instable.
8. Ne placez aucun objet pointu ni tranchant en contact direct dans les parois du sac.
9. Vérifiez la planche du sac et faites l'entretien régulièrement.
10. Arrêtez d'utiliser le produit si vous avez trouvé des dommages ou des vis desserrés.
Contactez votre revendeur pour vérification et éventuelle réparation.



WARNING

1. Read and follow instructions carefully before installing and using the bag board.
2. Make sure the bag board is securely locked in place and the bag is correctly attached on the hook before use.
3. Do not place more than 10 kg items in the bag installed. Excessive loading may cause a hazardous unstable condition and damage to your stroller.
4. The bag board is not intended to transport children. Do not let your children stand on the board. Otherwise, your children may fall and get hurt.
5. Do not let your children play with the bag board.
6. Pay extra attention when you across any elevation.
7. Engage the parking brake before you load the bag. Load the bag eventually on a level ground. Place the heavily objects at the bottom of bag. Everything should be placed entirely inside the bag, unbalanced loading may cause unstable condition.
8. Do not put any sharp objects into the bag.
9. Check the bag board and do maintenance regularly.
10. Stop using the product if you found any damages or loosen screws.
Contact the retailer for checking and repairing.




Impression à l'encre de soja sur carton recyclé.
Printed with soy ink on recycled paper.

1064687_A



YOYO

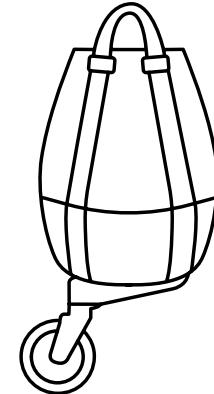

YOYO bag

