




IN MY BOOT

STOKKE® XPLORY® STROLLER FITS INTO THE
FOLLOWING MODEL OF CARS
AND EVEN MORE

AUDI



Audi A1

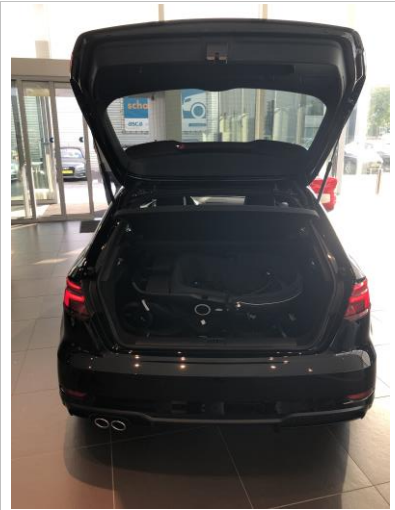

Audi A3



Audi A3 Limousine



Audi A4



Audi A5 Sportback



Audi A6



Audi A7




Audi E Tron



Audi Q2



Audi Q3

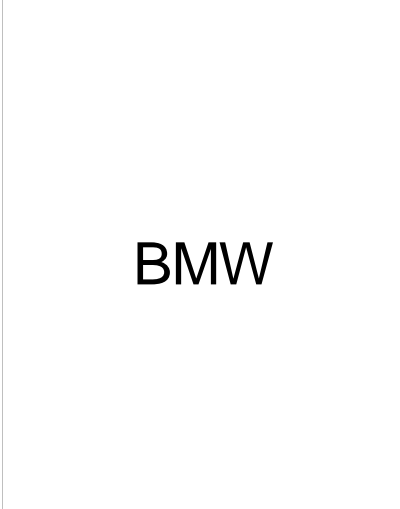

BMW



BMW 1-series



BMW 3-series



BMW i3



BMW X1

LAMBORGHINI



Lamborghini Huracan

MINI



Mini Clubman



Mini Cooper



Mini Countryman

OPEL



Opel Corsa



Opel Adam



Opel Ampera




Opel Grandland X



Opel Karl

PORSCHE

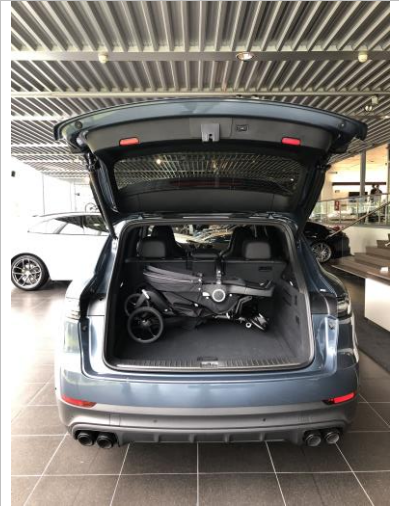

Porsche Cayenne



Porsche Macan



Porsche Panamera Sport Turismo



Porsche Panamera

TESLA



Tesla Model 3




Tesla Model S



Tesla Model X 6 seater

VOLVO

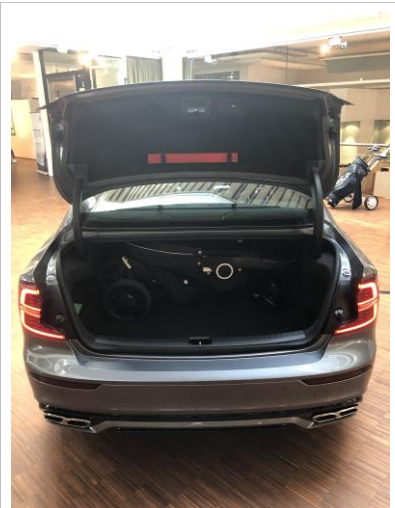

Volvo S60



Volvo S40



Volvo V60



Volvo XC40

VOLKSWAGEN



VW Golf



VW Polo



VW T Cross



VW T Roc