STOKKE[™]

STOKKE AS Parkgata 6, 6003 Ålesund NORWAY Tel: +47 70 24 49 00 Fax: +47 70 24 49 90 Email: info@stokke.com www.stokke.com

IMPORTANT INFORMATION

Stokke[®] Sleepi[™] – Australia and New Zealand

DATE: 06 June 2012

PAGE: 1 of 1

Congratulations with your new Stokke® Sleepi™! We hope that you will be very satisfied with it.

 $(\blacklozenge$

To ensure correct use of the product, please read the following information carefully:

Recommended mattress size

This cot has been manufactured for use with a mattress which measures 677 mm wide by 1210 mm long and 80 mm in thickness for Sleepi and 573 mm wide by 733 mm long and 80 mm in thickness for Mini and have the shape of the cot/mini-cot. The width and length are specified because it is important that the gaps between the mattress and the sides and ends of the cot will not exceed 40 mm. This is to minimize the risk of a child's limb becoming caught in the gap. The thickness of the mattress has been specified to ensure that the depth of the cot is greater than 500mm with the mattress base in the lower position to minimize the risk of a child climbing or falling out of the cot.

WARNING: TO PREVENT FALLS, THE MATTRESS BASE OF THIS COT SHOULD BE ADJUSTED TO THE LOWEST POSITION BEFORE THE CHILD CAN SIT UP.


Open hole fittings

۲

To prevent your baby's fingers to get trapped in gaps or open holes, please make use of the open hole fittings included in the package. Always after assembling or reassembling the cot, fix the open hole fittings, **part A**, in all holes that remain open on the sides of the cot, and **part B** in the mattress base.

The open hole fittings are easily installed. Just insert the "screw" from one side of the hole and the "nut" from the other side, and press them together **using your fingers**.

To remove the open hole fittings, use two coins/ screwdrivers. Screw from each side at the same time in opposite directions.

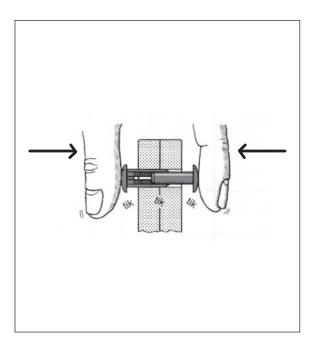

Australia and New Zealand only: Advice for use

The section of the support bracket attached to the frame of the bed, should always be on the underside of the mattress base.

Stokke[®] Sleepi[™] design: Grønlund & Hviid Design Stokke[®] Sleepi[™] is manufactured by: Stokke AS, Parkgata 3, N-6003 Ålesund, NORWAY

۲